

## What is the **Working Range**?

Each platform of the EZcarlift is 10 inches [25 cm] wide. The middle 6 inches [15 cm] of the platform is utilized for lifting a vehicle. This is what we consider the **Working Range** of the lift (platform).

For an example, xm40-2638 is a Cross Spacer, (sometimes referred to as cross bar or cross member), with overall length of 40 inches [102 cm]. This will accommodate vehicles with jacking points width in the range of 26 to 38 inches [66 to 96 cm].



Below is a chart of the working range for all available standard and custom cross spacer:

<b>Cross Spacer #</b>	<b>Range in inch</b>	<b>Range in centimeters</b>
xm40-2638	26" to 38"	66 to 96 cm
xm52-3850	38" to 50"	97 to 127 cm
xm64-5062	50" to 62"	128 to 157 cm
xm74-6072	60" to 72"	158 to 183 cm
<b>Custom cross spacers*</b>		
xmC34-2032	20" to 32"	51 to 81 cm
xmC37-2335	23" to 35"	58 to 89 cm
xmC45-3143	31" to 43"	78 to 110 cm
xmC59-4557	45" to 57"	114 to 145 cm
xmC69-5567	55" to 67"	140 to 170 cm

\*Custom Cross Spacers (xmC) are in house modified standard spacers with changed working range. *In many cases this may eliminate the need of purchasing a second set of spacers and provide a better fit to a specific vehicle or for a specific need.*

The length of the jacking points (*front to back dimension*), is accommodated by the infinitely adjustable rubber pads, from 6 to 59 inches [15 to 150 cm]. For jacking points longer than 59 inches [150 cm] we do have an optional Ramp Extensions Kit (REK), adjustable in 3 inch [8 cm] increments to accommodate lengths up to 72 inches [183 cm].