

How to calculate the Curb Weight?


The best way is to look in the manual for the information. Many of times the information are on the "B" pillar (the driver's door jamb) or the driver door or combination of the driver door and the door jamb or elsewhere. Every manufactures has different location for the labels.

Below are some samples of the door jamb labels:

Honda has both labels on the driver's door jamb (B pillar). The one is listing the GVRW of 3263 lbs



and the second the total load capacity of 450lbs

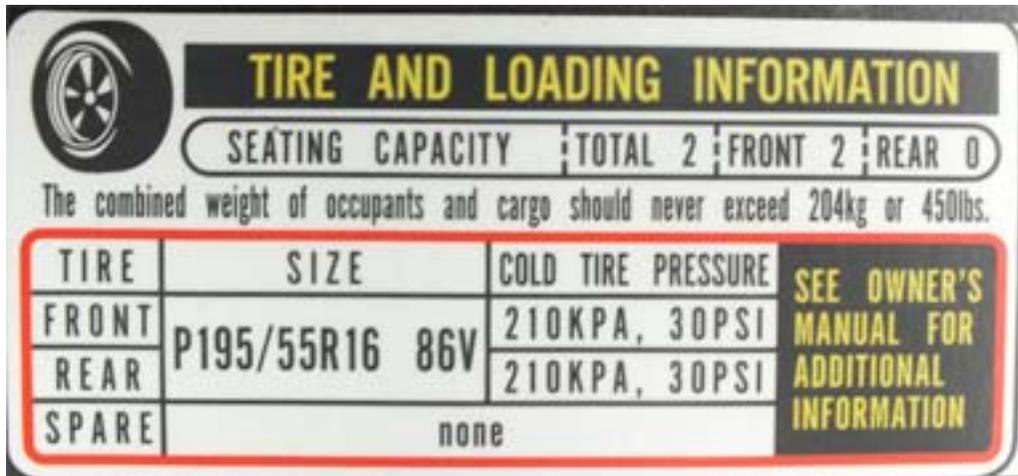

Curb weight of the Honda will be $GVRW - \text{Tire and Loading capacity} = 3,263 - 450 = 2,813$ lbs

I hope this helps